

# ◆ Installation manual for Solar Tiles ◆

## ◆ This installation manual for below goods.

SF-S200, SC-S200, SF-S100, SF-R100

## ◆ Installation Environment

We recommend that solar tiles should not be installed in indoor place and the shade place.

Our solar tiles require to operate sunlight.

Please install our solar tiles in sunny place.

## ◆ Installation Procedure




1) Mark the place of installation



2) Cut and drill place of installation



3) Cut ground larger and deeper than 1cm solar tile.

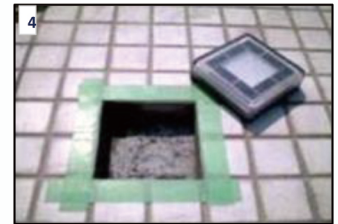

4) Make flat ground and Clean space of installation



5) Spread silicone or urethan in bottom side



6) After put solar tiles in ground, press solar tile



7) Fix solar tile by silicone or urethan ( no acid ingredient)

Cutting size of ground of all solar tile model	
SF-S200	21*21*7cm
SC-S200	21*21*7cm
SF-S100	11*11*7cm
SF-R200	11*7cm

※ Caution : Do not use cement for fixing adhesive

(You have to cover full-surrounding solar tiles with silicone or urethan more than 1cm thickness)

Cement do chemical reaction and strong pressure to solar tiles.

Cement can result in breakage of solar tiles.

In other words, Solar tiles should be installed out of reach of cement.

## ◆ Warranty of solar tiles

The period of warranty is 3 years.

But, In case defectives from cement, We can't guarantee them.

## ◆ Photos of installed goods

